

Connection electric ball valves

Achtung! Achtung! Achtung! Achtung! Achtung! Achtung!
Attention! Attention! Attention! Attention! Attention! Attention!

Deutsch →

Electric Ball Valves


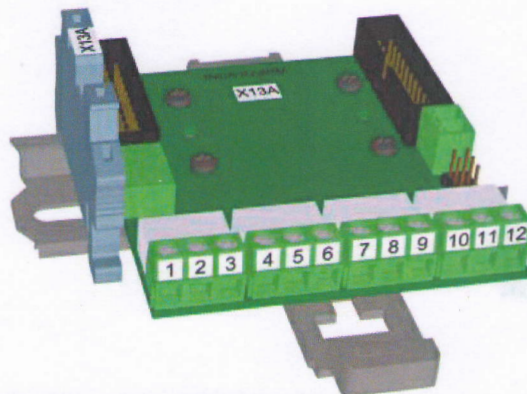


Fig. 5.8: Relay X13A, Connections ball valves

The electrical connections for the ball valves are established from the left with the first relay - channel 1 - to the right (channel 2 to channel 4). The first two terminals of each relay are assigned in each case.

Pos.-Nr. X13A	Chanel	Plug of ball valve
X13A.1	1 (K4)	3
X13A.2		2
X13A.3		
X13A.4	2 (K5)	3
X13A.5		2
X13A.6		
X13A.7	3 (K6)	3
X13A.8		2
X13A.9		
X13A.10	4 (K7)	3
X13A.11		2
X13A.12		

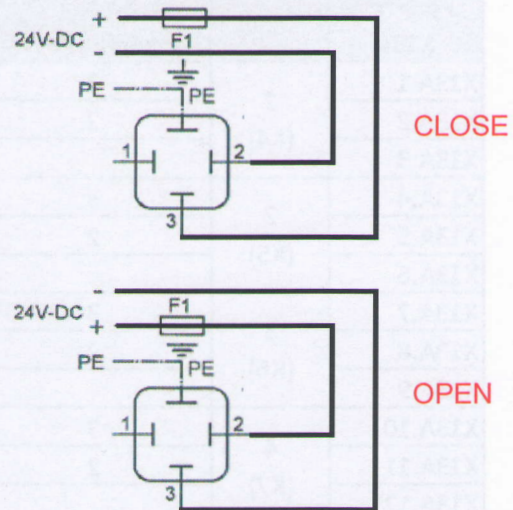

Maximum load of the relay connections 30VDC / 1A.

Warnung



All not used contact cables of electric ball valve must be isolated professionally!

Anschluss elektrische Kugelhahnventile

Achtung! Achtung! Achtung! Achtung! Achtung! Achtung!
Attention! Attention! Attention! Attention! Attention! Attention!

English →

Elektrische Kugelhähne


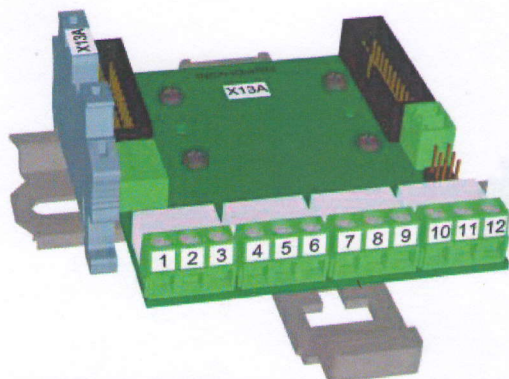



Abb. 5.8: Relais X13A, Anschlüsse Kugelhahnventil

Der elektrische Anschluss der Kugelhähne erfolgt von links beginnend am ersten Relais - Kanal1 – nach rechts (Kanal 2 bis Kanal4). Es werden jeweils die ersten zwei Klemmen zur Ansteuerung je Relais belegt.

Pos.-Nr. X13A	Kanal	Stecker Kugelhahn Ventil
X13A.1	1 (K4)	3
X13A.2		2
X13A.3		
X13A.4	2 (K5)	3
X13A.5		2
X13A.6		
X13A.7	3 (K6)	3
X13A.8		2
X13A.9		
X13A.10	4 (K7)	3
X13A.11		2
X13A.12		

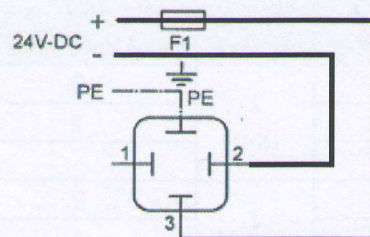

ZU

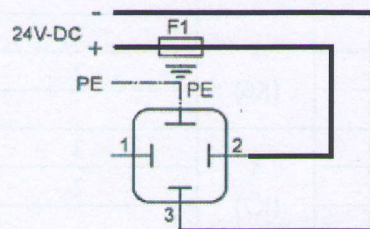

AUF

Maximale Belastung der Relaisanschlüsse 30VDC / 1A.

Warnung



Die nicht verwendeten Kontaktkabel des elektrischen Kugelhahnventils fachgerecht isolieren.